

1/8

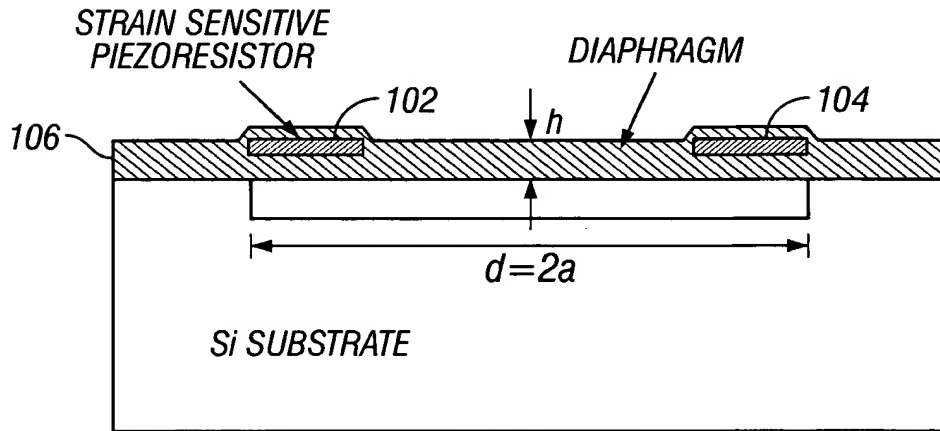


FIG. 1

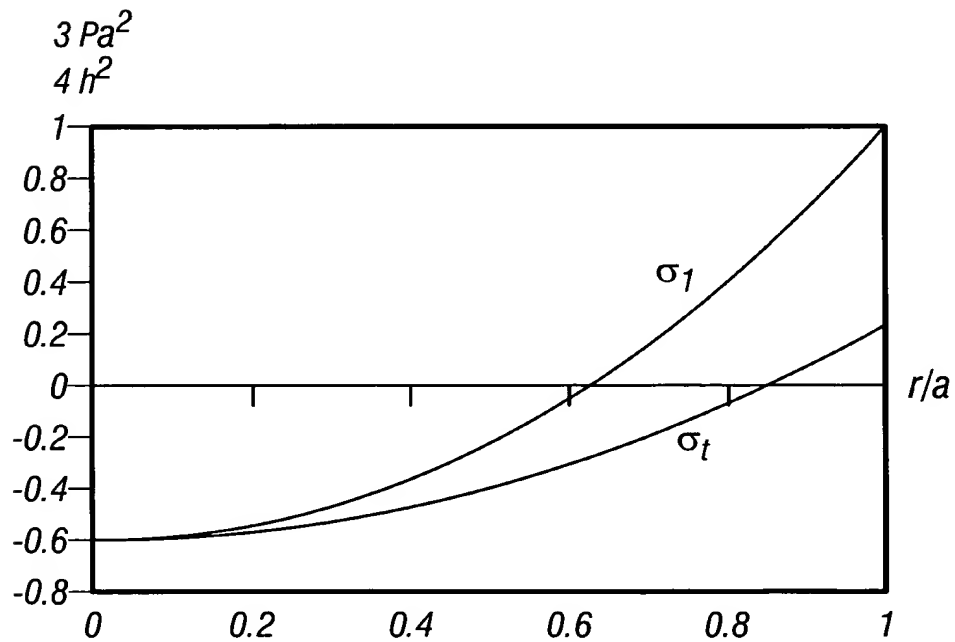
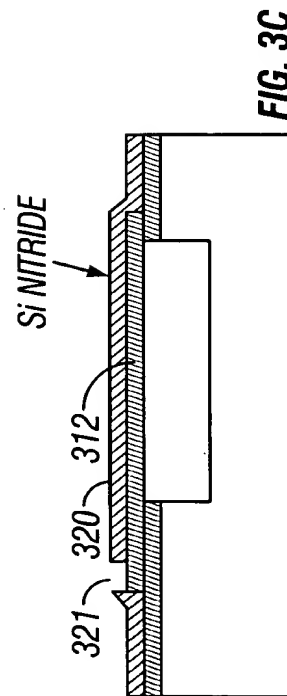
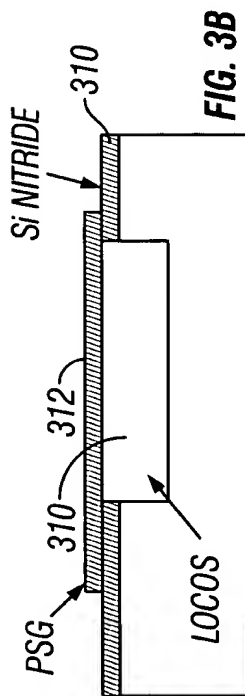
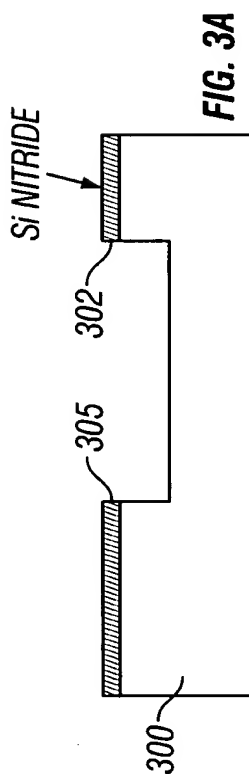
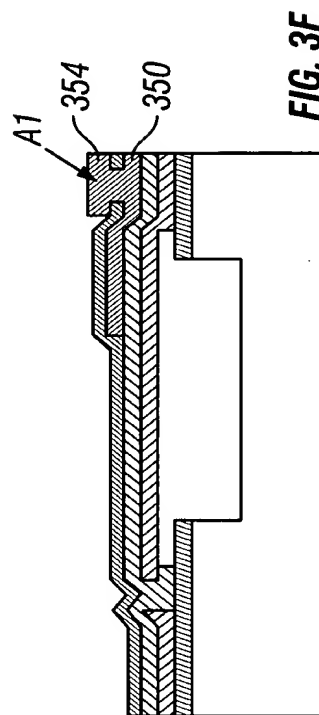
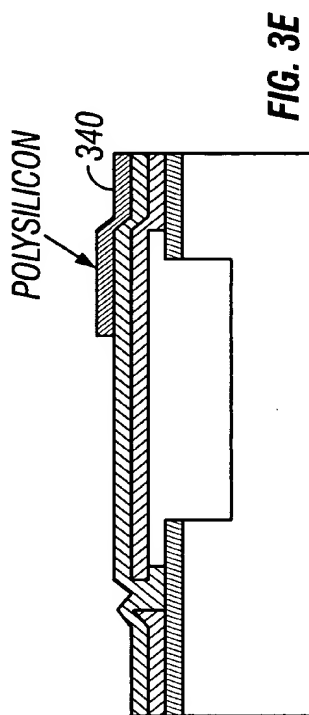
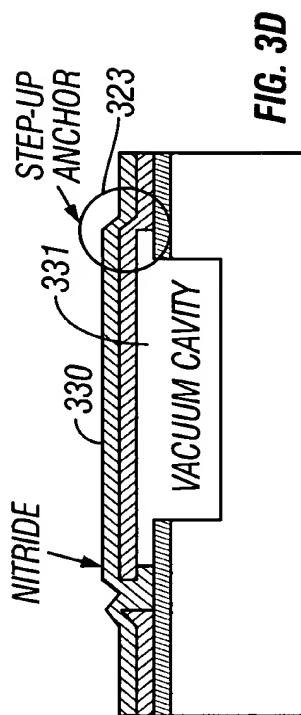


FIG. 2

2/8



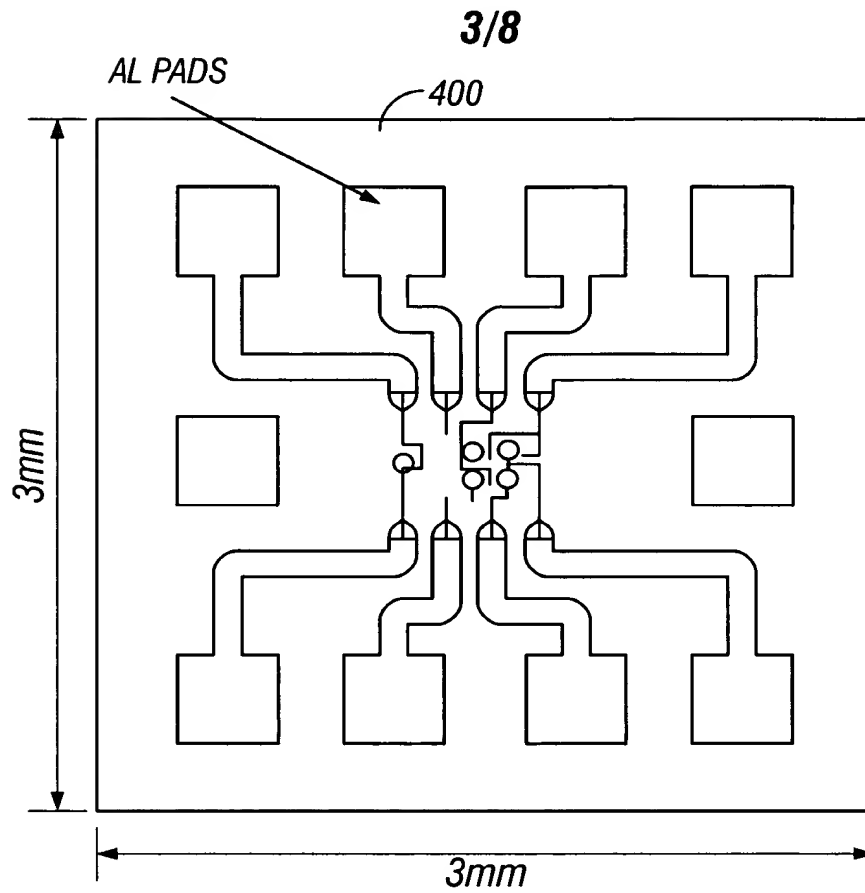


FIG. 4

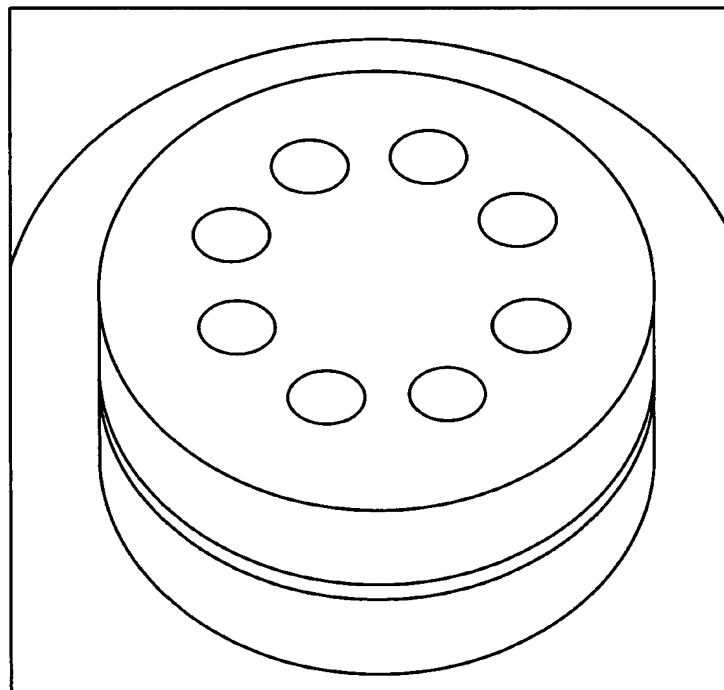


FIG. 5

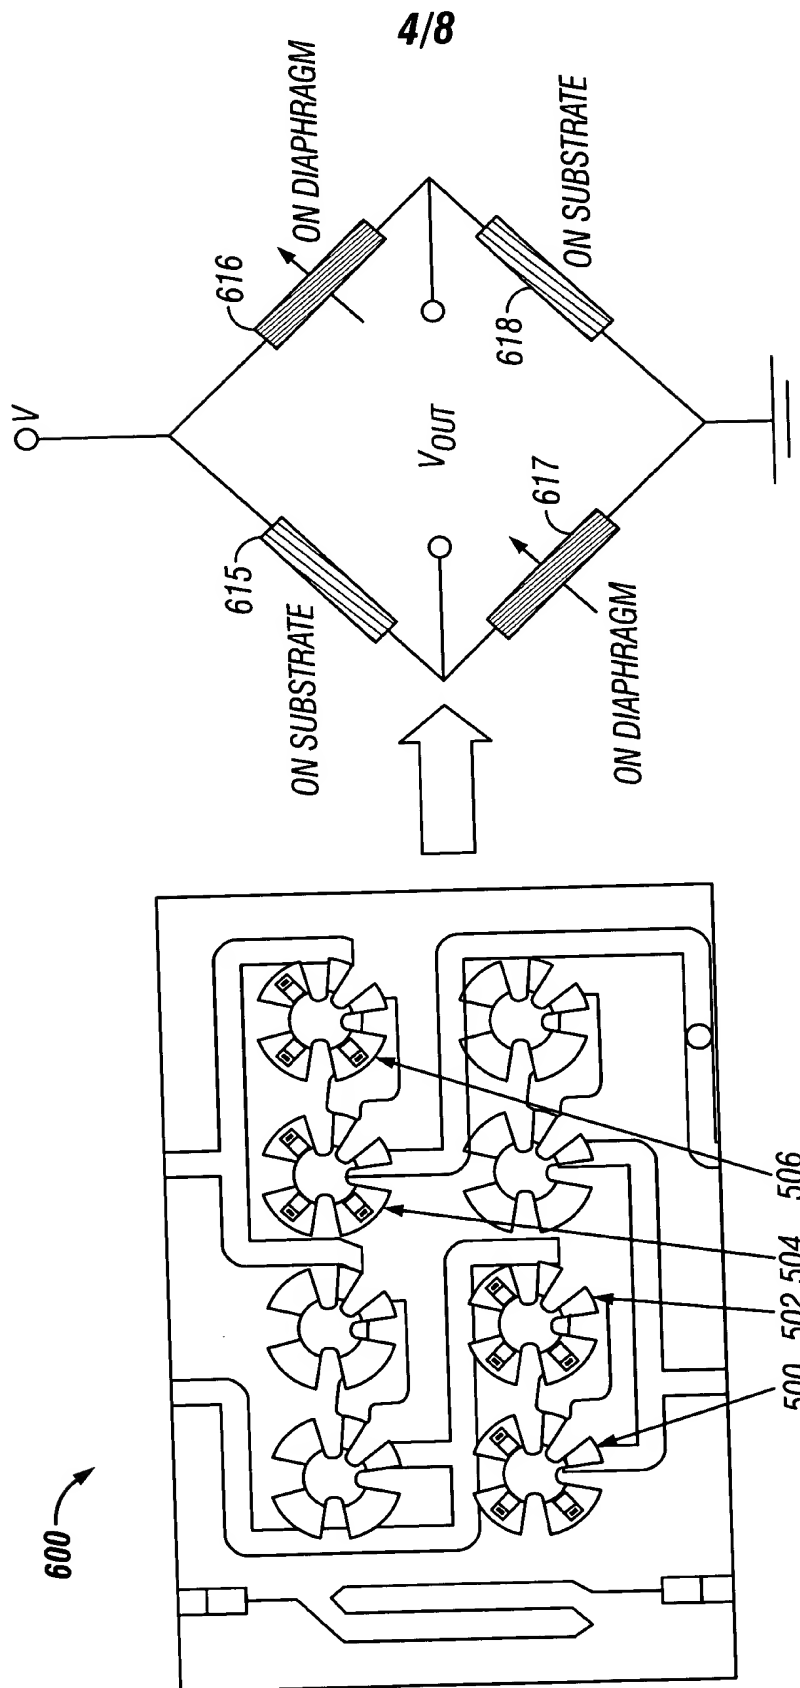


FIG. 6

5/8

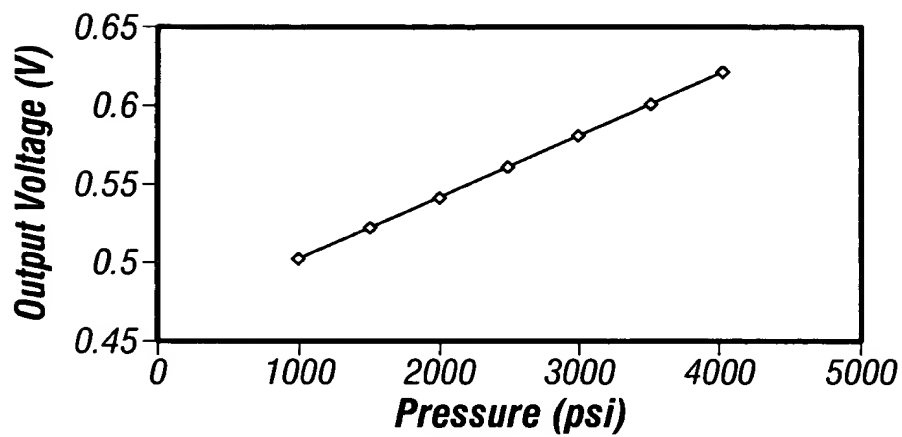


FIG. 7

STEP-UP ANCHOR:
 CAUSED BY
 THE EDGE OF
 SACRIFICIAL LAYER

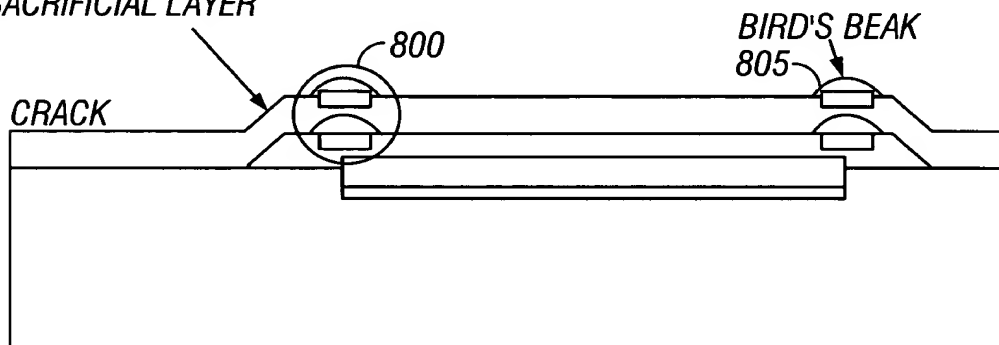


FIG. 8

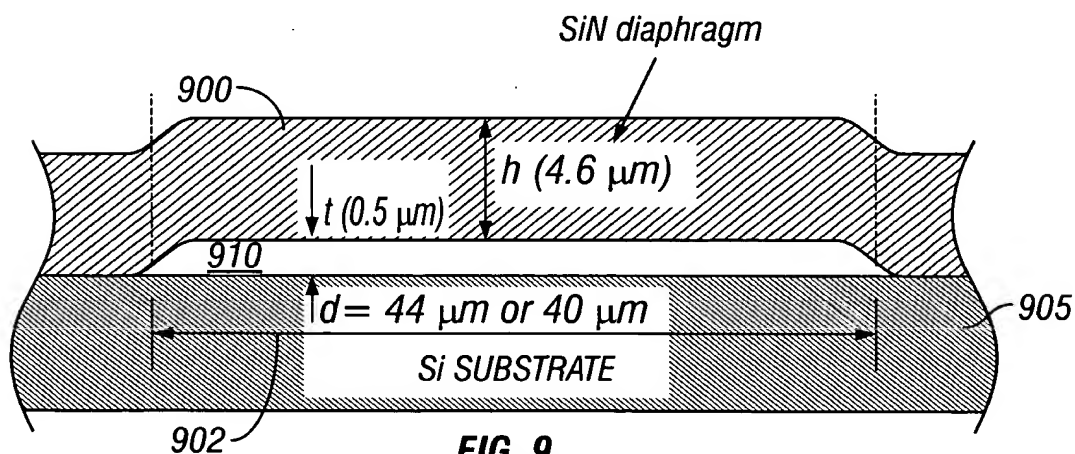


FIG. 9



6/8

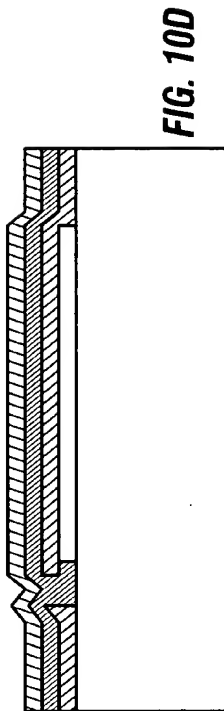


FIG. 10D

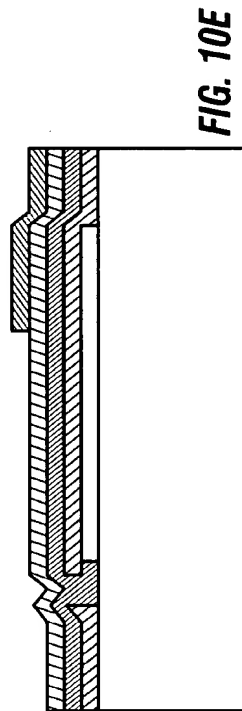


FIG. 10E

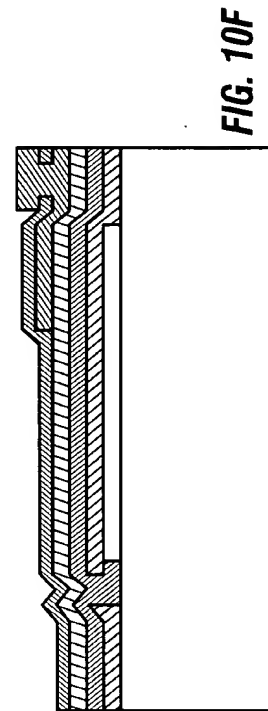


FIG. 10F

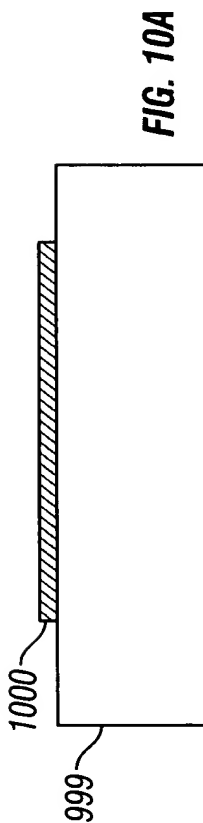


FIG. 10A

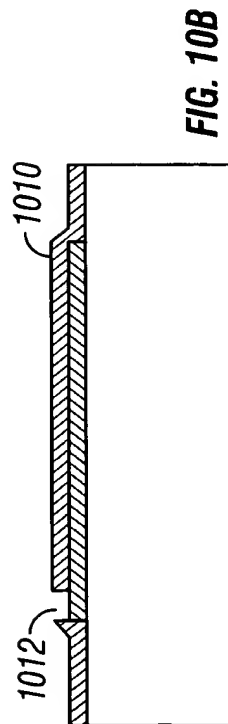


FIG. 10B

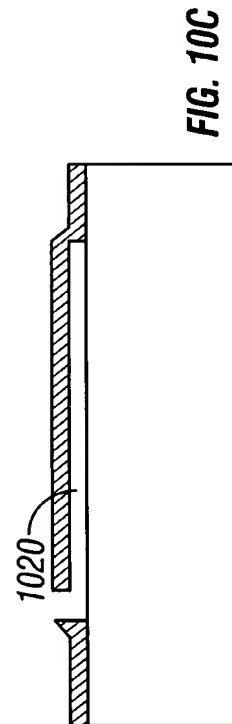


FIG. 10C

7/8

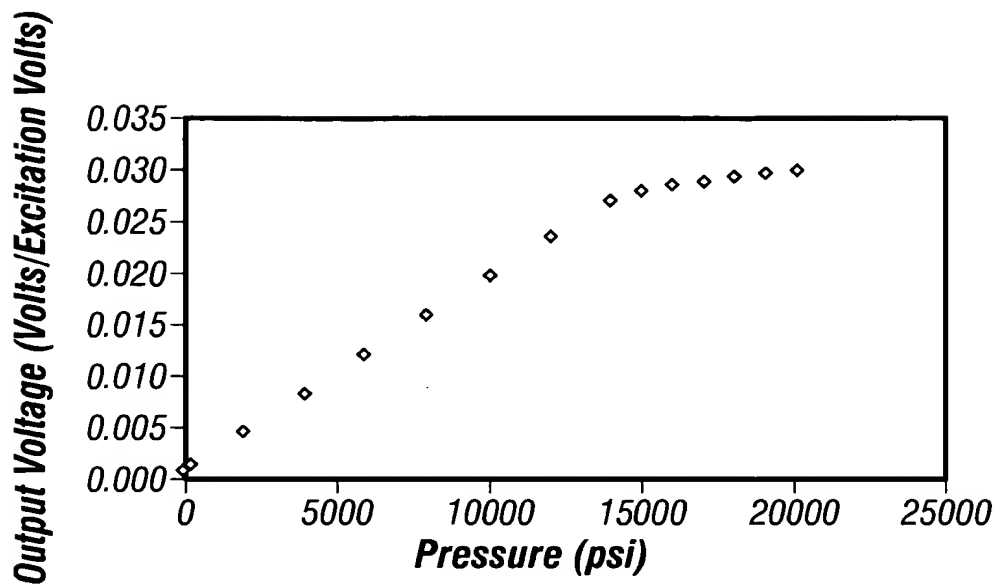


FIG. 11


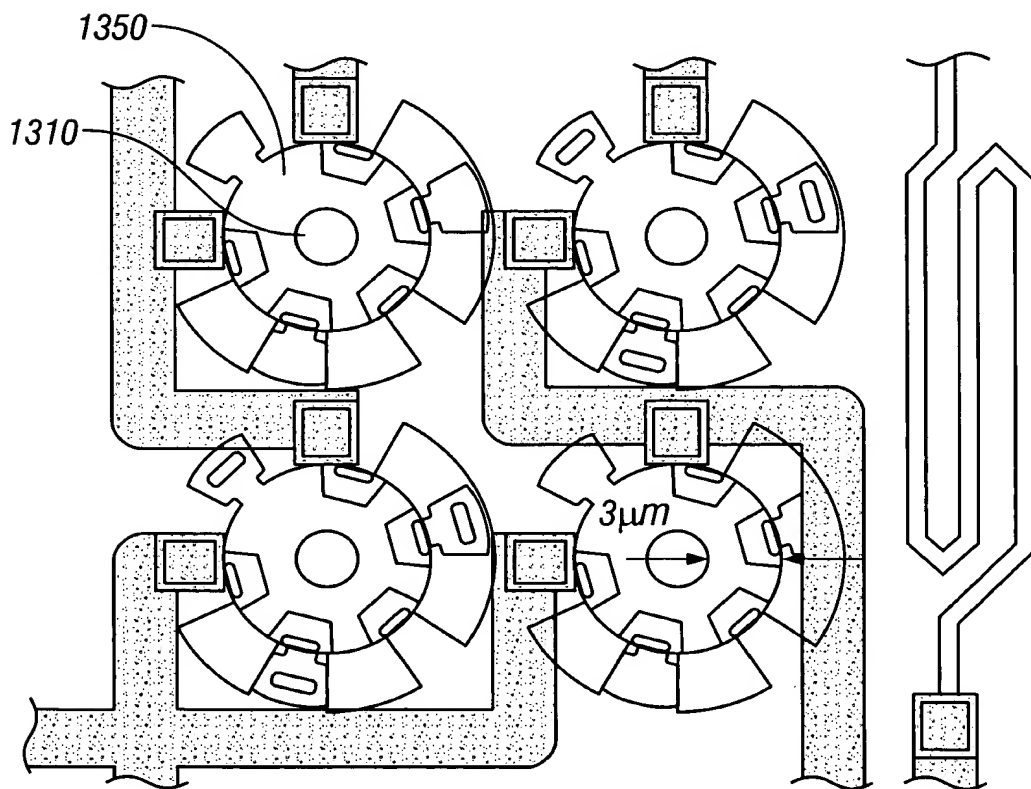


FIG. 12

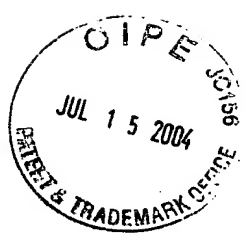

8/8

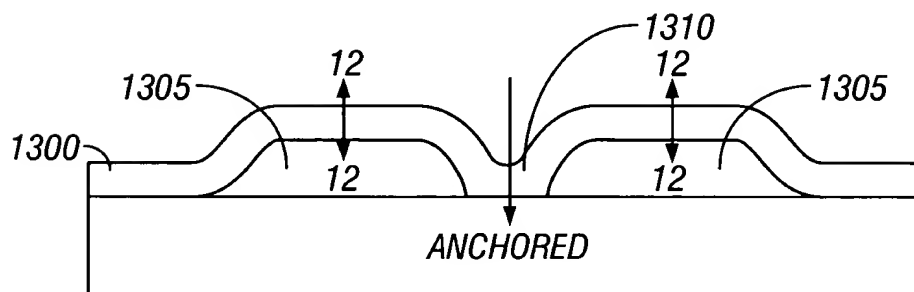


FIG. 13